



Made by

STERIXENE
PULSED LIGHT STERILIZATION

PULSTEC

Pulsed Light – High-performance Disinfection Module

System-Features

- Xenon flash lamp technology
- Lamp lengths 150 mm to 400 mm
- Housing in stainless steel IP 65
- Lamp life > 11 million pulses
- Mercury-free lamps

Advantages

- Chemical-free disinfection
- Inactivation level up to 6 log
- Intensity control
- Glass breakage detection
- Maintenance-friendly lamp exchange
- Low substrate temperature

PULSTEC

Save, thorough and strong: Chemical-free disinfection of food packaging and food surfaces with high-power pulsed xenon lamps.

Technical data of the sterilization module PULSTEC

- Variable lamp lengths 150 mm - 400 mm
- Polychromatic light spectrum 100 nm - 1000 nm
- Pulse duration 300 µs
- Pulse energy 300 J
- Capacitive discharge voltage 4000 V
- Inactivation rates of up to log 6
(dependent on germ and number of pulses)
- Pulse frequency max. 5 Hz

As system suppliers, Höne und STERIXENE offer lamp units as well as bioindicators for a rapid analysis of disinfection rates in their own microbiological laboratory.




Lamp unit open

System control


- Instant On / Off without warm-up time
- Adjustable controlled pulse energy
- Switch cabinet in stainless steel IP 65
- Sensor-monitored power and intensity control (optional)
- Individual interface to the manufacturing machine
- Easy retrofitting on existing machines

Lamp unit

- Glass breakage detection for quartz plate
- Mercury-free lamp technology
- Stainless steel housing IP65
- Lamp life > 11 million pulses
- Variable lamp lengths 150 mm - 400 mm
- Patented maintenance-friendly lamp change within few minutes
- Smooth simmer operation to increase lamp life

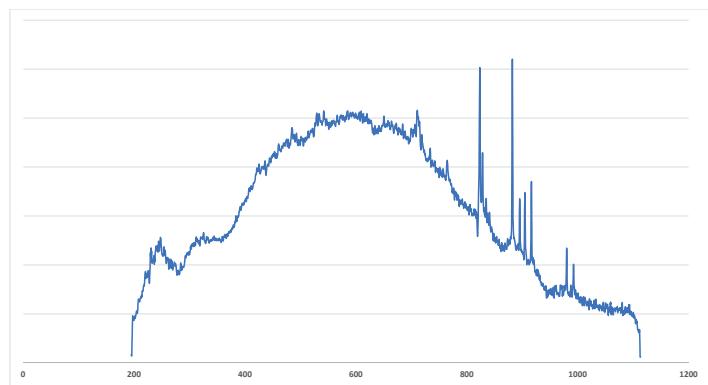

Irradiation spectrum

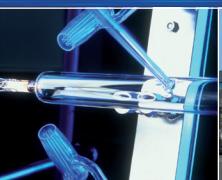honle group	Disinfecting	Curing	Drying	Bonding	Potting	Measuring					
											
eleco panacol-efd	eltosch grafix	gepa coating	hone luminez	panacol	printconcept	raesch	sterilsystems	technigraf	umex	uv-technik speziallampen	



Dr. Höne AG UV Technology, Lochhamer Schlag 1, 82166 Gräfelfing/München, Germany
Phone: +49 89 85608-0, Fax: +49 89 85608-148. www.hoenle.de

Operating parameters depend on production characteristics and may differ from the foregoing information.
We reserve the right to modify technical data. © Copyright Dr. Höne AG. Updated 11/20.